

Right Mouse Button

Press the **Right Mouse** button on the pen tray to have your next press on the screen recognized as a right-click.



A graphic in the bottom right of your screen will appear to remind you that your next press will be registered as a right-click.


TIP: Instead of pressing the right mouse button, press and hold on the area of the screen where you would like to make a right-click. After a few seconds of pressing and holding the area, the right-click menu will appear.

Orienting Your SMART Board Interactive Whiteboard

Orientation ensures your touch is registered accurately when you are using the interactive whiteboard.

If you are touching an icon and your cursor appears somewhere other than where you are pressing, try orienting the interactive whiteboard. After orientation, your cursor should appear wherever you are touching the interactive whiteboard.

To launch the Orient function, press and hold the **Keyboard** button and the **Right Mouse** button simultaneously until the Orientation screen appears.

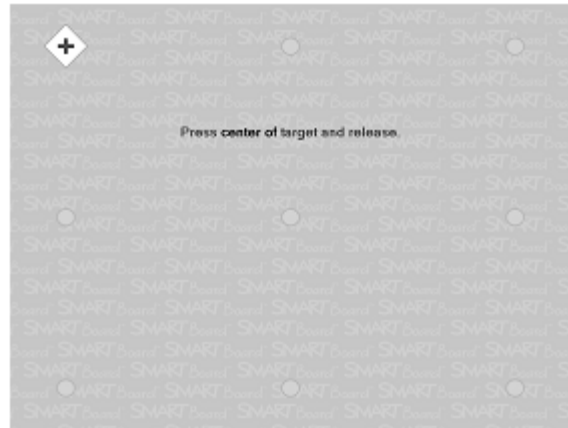

Orientation screen

The Help Button

If the pen tray features a help button, press it to launch the **Help and Support for Your SMART Board Interactive Whiteboard** dialog box. The dialog box provides one-touch access to information that will help you answer almost any question relating to your SMART product.

