

## Hands-On Practice: Basic Functionality

Your school or company has just moved one of your SMART Board™ interactive whiteboards into a new room because you were unable to access the Internet from the old location. You will be the first person to use the interactive whiteboard in the new environment and will be showing everyone how to use the interactive whiteboard and the Internet together.

You have learned through experience that whenever a piece of technology gets moved, it's a good idea to test it before you deliver a lesson or presentation. The computer, SMART Board interactive whiteboard and projector appear to be working properly when you turn everything on. However, when you double-press the Internet browser icon on your desktop, your cursor appears a few inches away from your finger press.

### Orienting Your SMART Board Interactive Whiteboard

You remember that when the projector or interactive whiteboard moves location, you should orient the SMART Board. This will tell the computer where the image of the desktop is being displayed on the surface of the interactive whiteboard.

- 1 To orient the interactive whiteboard, press and hold the **Keyboard** button and the **Right Mouse** button simultaneously until the Orientation screen appears.




*Pen-tray buttons*



*Pen-tray buttons*

- 2 Begin the orientation process at the upper left corner of the Orientation screen. Press your finger or pen firmly on the center of each cross in the order indicated by the white, diamond-shaped graphic.

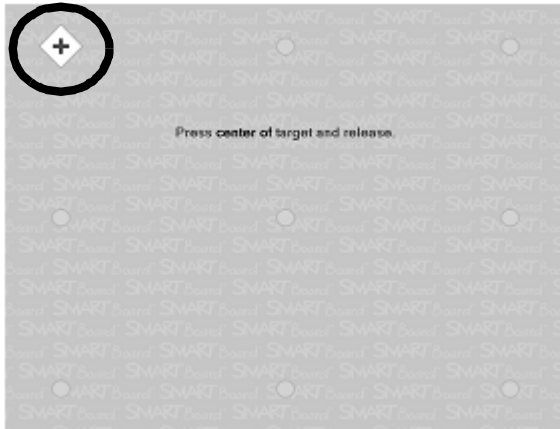

*Orientation screen*

**NOTE:** The point is registered when you remove your finger, not when you first touch the Orientation screen.